ARAT Telephone mount for

Type: Ford Connect
Transit / Tourneo

Part No: 1348

ARAT® GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

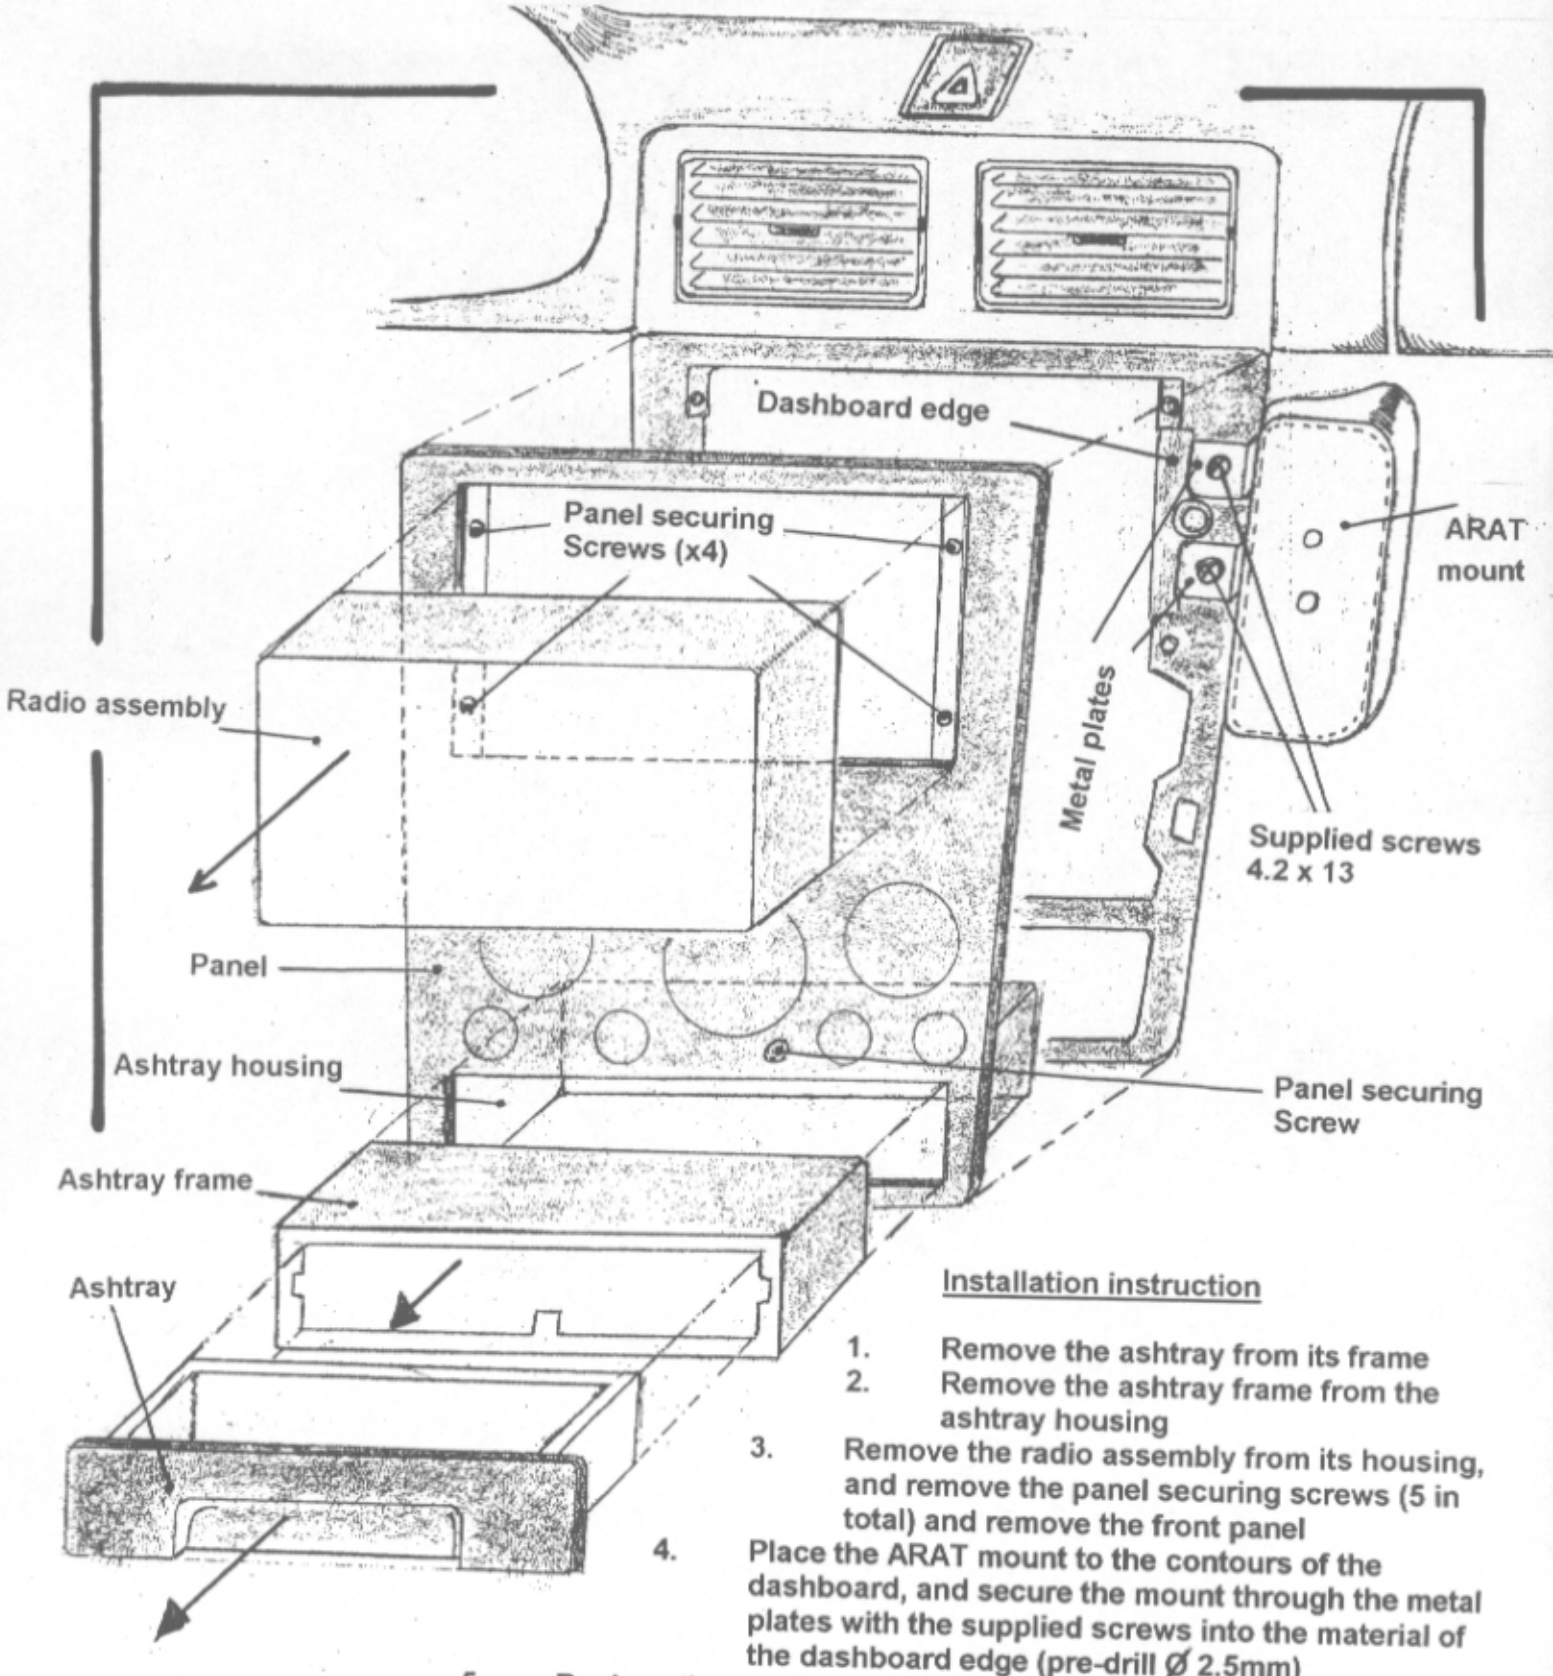

Installation instruction

1. Remove the ashtray from its frame
2. Remove the ashtray frame from the ashtray housing
3. Remove the radio assembly from its housing, and remove the panel securing screws (5 in total) and remove the front panel
4. Place the ARAT mount to the contours of the dashboard, and secure the mount through the metal plates with the supplied screws into the material of the dashboard edge (pre-drill Ø 2.5mm)
5. Replace the panel, radio assembly, ashtray frame and the ashtray